







POP for TV Console 1168096W

Parts list

Please read completely through the instructions and verify that all parts listed are present before beginning assembly.

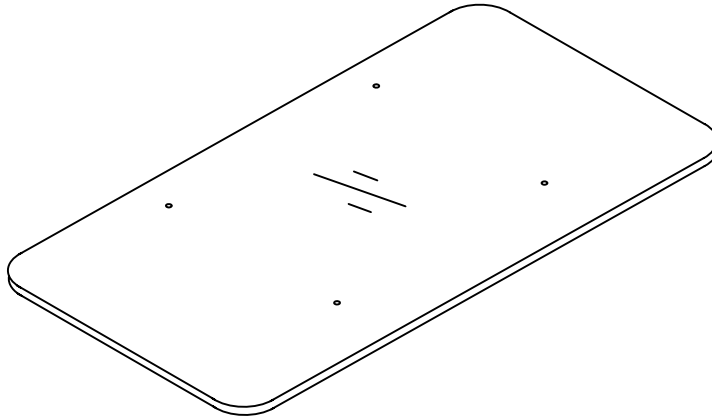

     A- Display Panel (1)



B- 1" Bolt (4+1 extra) C- Flat Washer (4+1 extra) D- Nut (4+1 extra) E- 1-3/8" Bolt (2+1 extra) Open Wrench (1) Allen Wrench(1)

Assembly Instructions

1. Unpack the unit carefully and confirm that you have all hardware and parts required.
2. Attach two Vertical Bars to the backside of Display Panel (A) by inserting four 1" Bolts (B) through the Display Panel holes and the proper holes of Vertical Bar as shown in detail #1.
3. Secure Flat Washers (C) to the bolts, then secure with Nuts (D) by rotating clockwise until firmly secured with the included Open Wrench. Note: Be sure the vertical bars are level with each other and the hooks point toward the bottom of Display Panel. As shown in detail #1.
4. Lift and attach the Display Panel (A) with Vertical Bars onto the Mounting rail with bolts (E). Make sure the Display Panel is positioned at the center of Mounting Frame.

